

## DF57 Series Mating / Unmating Operation Instruction


## Mating

• DBy positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion. ©Slightly press the socket down at cable side to tilted angle.

©Press down at the lever side with stabilizing the cable side to insert. Mating completes.

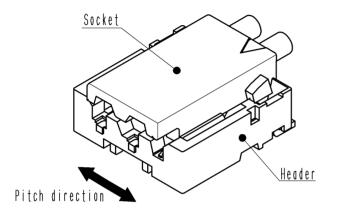


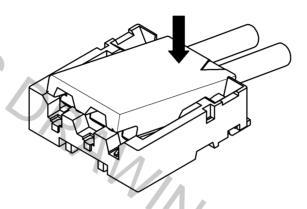

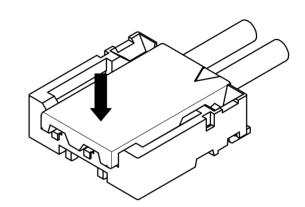


## Unmating


⊕Hook the lever with finger nail.

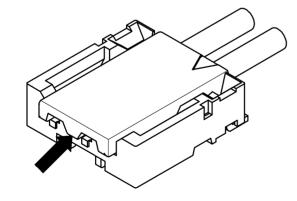

②Lift up to the upper difrection and friction lock is released.

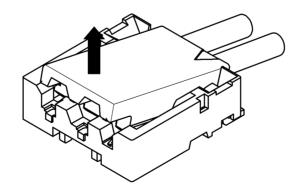

Slift up to the upper direction and positive lock is released. Removal completes.

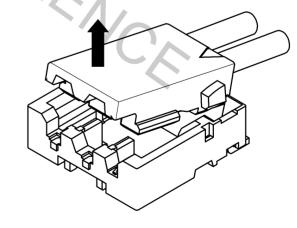

HS.	DRAWING NO.	EDC3-344747-01		
	PART NO.	DF57AH-6S-1.2C		
	CODE NO.	CL666-0111-2-00	$\triangle$	$\frac{2}{2}$

M HC0011-5-8\_AN 1 2 3 4 5